


- 14479** WX-101A-1 = 120 Volt / ½-2 HP / 1 Phase
- 14479A** WX-101A-2 = 208-230 Volt / ½-2 HP / 1 Phase
- 14479B** WX-101A-3 = 208-230 Volt / ½-10 HP / 3 Phase
- 14479C** WX-101A-4 = 380-460 Volt / ½-10 HP / 3 Phase

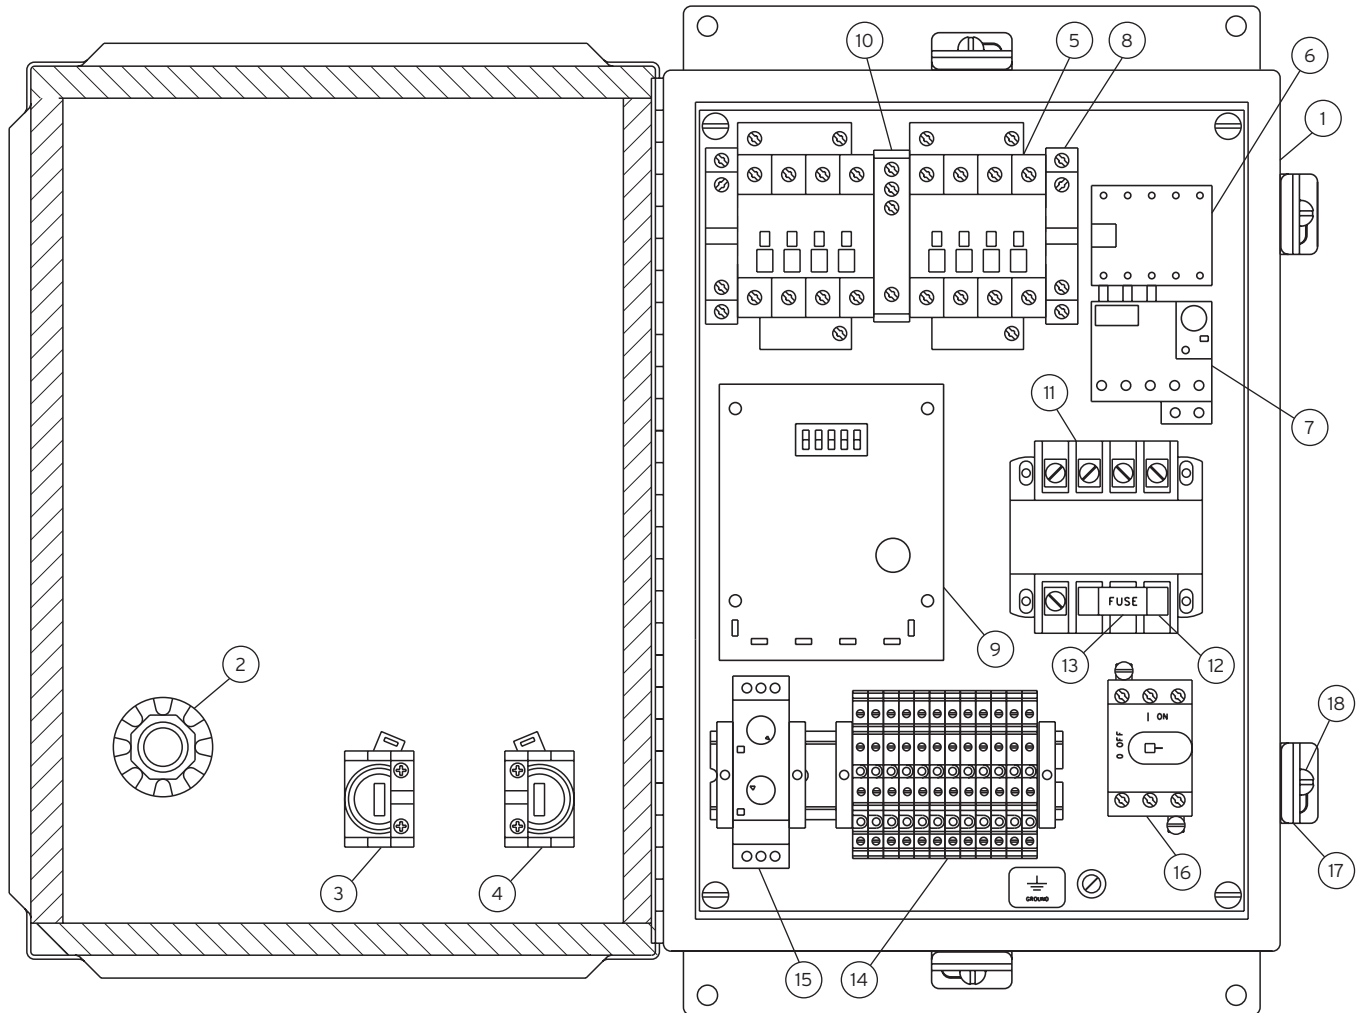

Order By Part Number, Not Code Number

CODE #	PART #	QTY	DESCRIPTION
1	N/A	1	Stainless Steel Enclosure
2	14397	1	Door Disconnect Knob
3	14158	1	Pushbutton Stop (N.C. Red)
4	14159	1	Pushbutton Start (N.O. Black)
5	14160	1	Reversing Contactor - 3 Phase
	14162	1	Reversing Contactor - 1 Phase*
		1	*(Includes Code 6)
6	14113	1	Contactor
7	14106A	1	Overload - 460V
	14106B	1	Overload - 120V
	14106C		Overload - 208-230V/1 Phase
	14106D	1	Overload - 208-230V/3 Phase
8	14163	1	Auxiliary Contact Block (1 Phase Only)

CODE #	PART #	QTY	DESCRIPTION
9	14395	1	Circuit Board, Printed
10	14169	1	Mechanical Interlock
11	14185	1	Transformer - 3 Phase
	14161	1	Transformer - 1 Phase
12	14165	2	Fuse Holder
13	13466	1	Fuse (2 Amp - 125 Volts) (FNA-2 or FNM-2)
14	14480	3	Terminal Block
15	14268	1	Timer
16	14167	1	Door Disconnect Switch & Shaft
17	13935	4	Top Cover Retainer
18	13942	4	Screw
	13625	4	Tamperproof Screw (Not Shown)
	14494	1	Solenoid Valve - 24 Volt Coil (Not Shown)