


**15258** WX-101A-5 = 208-240 Volt / 1/2-10 HP / 3 Phase  
**15258A** WX-101A-6 = 380-460 Volt / 1/2-10 HP / 3 Phase  
**15258B** WX-101A-7 = 380 Volt / 1/2-10 HP / 3 Phase

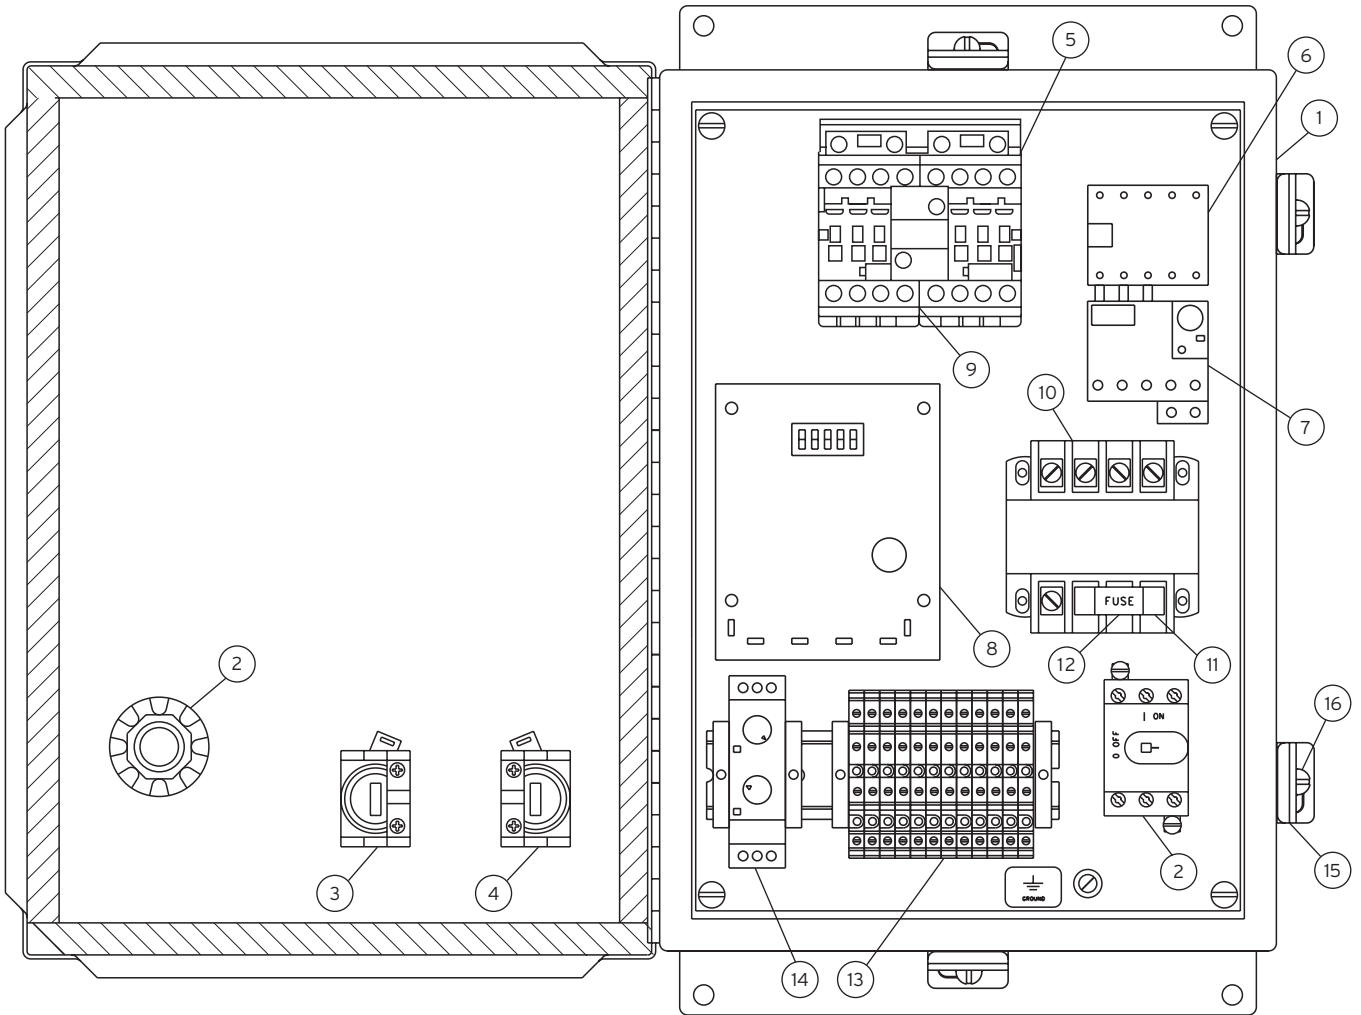

Order By Part Number, Not Code Number

CODE #	PART #	QTY	DESCRIPTION
1	N/A	1	Stainless Steel Enclosure
2	14728	1	Door Disconnect Kit Pushbutton
3	14158	1	Stop (N.C. Red) Pushbutton Start
4	14159	1	(N.O. Black) Reversing
5	15264	1	Reversing Contactor (WX-101A-5)
	15265	1	Reversing Contactor (WX-101A-6,7)
6	14113	1	Contactor
7	14106A	1	Overload - 460V
	14106D	1	Overload - 208-240V/3 Phase
	14106E	1	Overload - 380V
8	14395	1	Circuit Board, Printed
9	15285		Interlock Set

CODE #	PART #	QTY	DESCRIPTION
10	14185	1	Transformer - 1 Phase
11	14165	2	Fuse Holder
12	13466	1	Fuse (2 Amp - 125 Volts) (FNA-2 or FNM-2)
13	14480	12	Terminal Block
14	14268	1	Timer
15	13935	4	Top Cover Retainer
16	13942	4	Screw
	13625	4	Tamperproof Screw (Not Shown)
	14494	2	Solenoid Valve - 24 Volt Coil (Not Shown)